

# STERLING TRUCK LOCKS

## General information as follows:

Identify the lock you need by the key blank used and the design of lock compared to the illustrations.

Identify which tumblers and keying kits to use according to the separate chart organized by the key blank numbers at the bottom of this section.

For Sterling 360 see Mitsubishi Fuso

For Sterling Bullet see Dodge Ram pickup 2007-09

For Sterling Condor see the Freightliner section


For Sterling Cargo / SC series parts are not currently available

## IGNITION LOCKS

For A, AT, Acterra, L, LT, and M models, using H51 keyway

C-42-402 - coded cylinder

LC1402U - uncoded cylinder

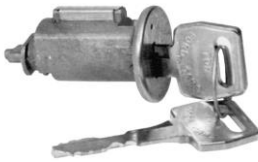

## DOOR LOCKS

For A, AT, Acterra, L, LT, and M models, using H51 keyway

D-42-201 – uncoded cylinder



DL1550 (DP-42-101) - keyed alike pair



Scroll down for more

# STERLING TRUCK LOCKS

## TUMBLERS AND KEYING KITS:

Key Blank	Tumbler #1 depth	Tumbler #2 depth	Tumbler #3 depth	Tumbler #4 depth	Tumbler #5 depth	Springs	Keying kits and notes
H50 / H51	P-42-131	P-42-132	P-42-133	P-42-134	P-42-135	P-42-130	A-42-110 current keying kit Also contained in A-42-150 kit no longer available for purchase (DWO)